
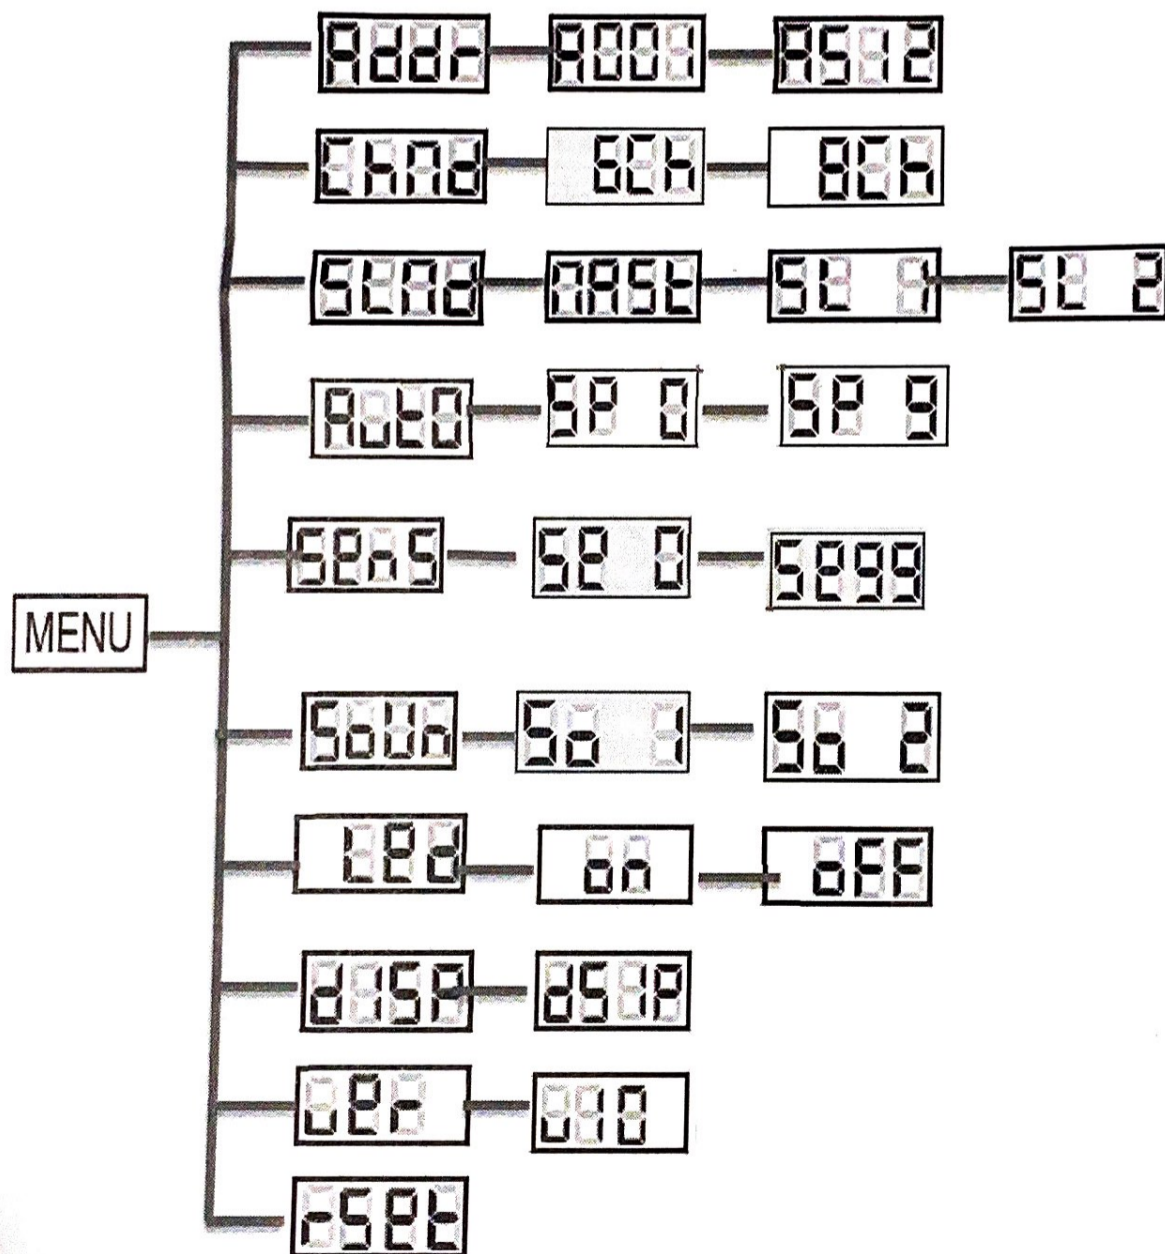


# CLAIR LIGHTING Multi Galaxy Ball

<b>Function Setting</b>				
<b>Menu</b>		<b>Value Function Description</b>		
MENU		Menu Key		
ENTER		Save/Store Key		
UP/DOWN		Speed adjust , DMX512 Address adjust		
<b>DMX 512 Channel Description</b>				
<b>6Channel</b>	<b>8Channel</b>	<b>DMX Value</b>	<b>Function</b>	<b>Description</b>
Ch1	Ch1	0~255	Dimmer	Total dimming, dark to bright
Ch2	Ch2	0~007	Strobe	Open
		008-255		Strobe, fast to slow
	Ch 3	0~255	Pan	0~540°
	Ch4	0~255	Pan Speed	From Fast to Slow
	Ch5	0~255	Tilt	0~360°
	Ch6	0~005	Tilt Rotation	Stop
		006~126		Forward Rotation from Fast to Slow
		127~128		Stop
		129~249		Forward Rotation from Slow to Fast
		250~255		Stop
	Ch7	0~007	Colour	Blackout
		008~024		R
		025~041		G
		042~057		B
		058~074		W
		075~090		R+G
		091~107		R+B
		108~123		R+W
		124~140		G+B
		141~156		G+W
		157~173		B+W
		174~189		R+G+B
		190~206		R+G+W
		207~222		R+B+W
		223~239		G+B+W
		240~255		R+G+B+W
	Ch8	000~199	Special Function	No Function
		200~209		Reset
		210~239		No Function
		240~255		No Function
Ch3		000~007	Function	No Function
		008~022		Function 1
		023~037		Function 2
		038~052		Function 3
		053~067		Function 4
		068~082		Function 5
		083~097		Function 6
		098~112		Function 7
		113~127		Function 8
		128~142		Function 9
		143~157		Function 10
	158~172	Function 11		

		173~187		Function 12
		188~202		Function 13
		203~217		Function 14
		218~232		Function 15
		233~247		Function 16
		248~255		Auto/Sound Control
Ch4		000~255	Movement Speed	Movement Speed From Slow to Fast
Ch5		000~015	Colour Chase	No Function
		015~035		Chase 1
		036~056		Chase 2
		057~076		Chase 3
		078~097		Chase 4
		098~117		Chase 5
		118~138		Chase 6
		139~159		Chase 7
		160~179		Chase 8
		180~200		Chase 9
		201~220		Chase 10
		221~241		Chase 11
	242~255	Chase 12		
Ch6		000~255	Chase Speed	From Slow to Fast

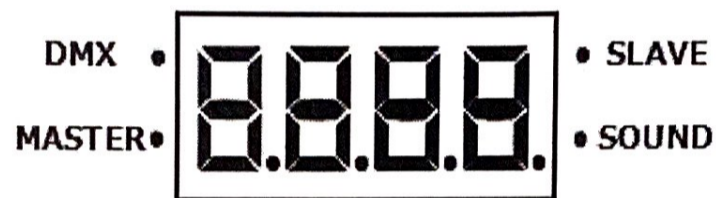

- > DMX ADDRESS SELECTION
- > DMX CHANNEL SELECTION
- > MASTER-SLAVE SELECTION
- > AUTO SPEED SELECTION
- > SOUND CONTROL SENSITIVITY ADJUSTMENT
- > SOUND CONTROL EFFECT SELECTION
- > DIGITAL DISPLAY SWITCH
- > DISPLAY DISPLAY FLIP SETTING
- > CURRENT SOFTWARE VERSION
- > RESET

## **LED Multi Galaxy Ball**

### Specification

Input Power: AC110-220V 50~60Hz  
Power: 120W

Lamp Source: 12pcs x 10W RGBW LED

Control Mode: Auto , Sound, DMX512, Master-Slave

Dimmer: 0~100% Smooth dimming

Strobe: 20times/second

Package size: 31cm x 21.5cm x 34.5cm

Weight: 4.8Kgs