

**ROUND RAGE 3IN1**

<b>Function Setting</b>		
<b>MENU</b>	<b>VALUE</b>	<b>FUNCTION DESCRIPTION</b>
A__	001~512	Console Mode or Slave Mode
A1~A9	1~9	Laser Mode, slow to fast
A2	1~9	LED Mode , slow to fast
A3	1~9	Strobe Mode, slow to fast
A4	1~9	Mixed Mode 1, Slow to fast
A5	1~9	Mixed Mode 2, Slow to fast
Soud	Soud	Sound /Voice Control Mode
uol	1~9	Voice Control Sensitivity, the higher the value, the more sensitive [ Press ENTER for 5 seconds to enter this function]
MENU	Menu Key	
ENTER	Save/Store Key	
UP/DOWN	Speed adjust , DMX512 Address adjust, uol adjust	
<b>DMX 512 Channel Description</b>		
Ch1	0~255	LED Dimmer: dark - light
Ch2	1~255	Laser Dimmer: dark-light
Ch3	0~5	No Strobe
	6~255	Strobe slow to fast
Ch4	0	Red LED off
	1~255	Red LED dimming: linear dimming from dark to light
Ch5	0	Green LED off
	1~255	Green LED dimming: linear dimming from dark to light
Ch6	0	Blue LED off
	1~255	Blue LED dimming: linear dimming from dark to light
Ch7	0	White LED off
	1~255	White LED dimming: linear dimming from dark to light
Ch8	0	Red laser off
	1~255	Red laser dimming: linear dimming from dark to light
Ch9	0	Green laser off
	1~255	Green laser dimming: linear dimming from dark to light
Ch10	0~255	Strobe from dark to light
Ch11	0~155	LED Motor Positioning
	156~255	Movement left/right: Slow to fast
Ch12	0~2	Laser Mirror Movement
	3~210	Laser Motor Positioning
	211~255	Laser Movement left/right: Slow to fast
Ch13	0~5	CH1~CH10 Effect
	6~55	Single Color Change
	56~105	Mixed Color Change 1
	106~155	Mixed Color Change 2
	156~205	Mixed Color Change 3
	206~255	Sound /Voice Control
Ch14	0~255	CH13 Auto Speed Adjust